

## COMPATIBLE VALVE/CARTRIDGE CHANGE GUIDE


For use with the following **Howdens**: Monobloc Swan kitchen tap(s)



### IMPORTANT! BEFORE YOU BEGIN

Replacing the valve/cartridge of the above tap is a straightforward procedure for any competent handyperson. However, should you have any doubts about your ability to tackle the task, we suggest you engage a suitably qualified professional.

You can also gain hints and tips about replacing a valve by watching our installation movies at [TapSparesUK.com](http://TapSparesUK.com).

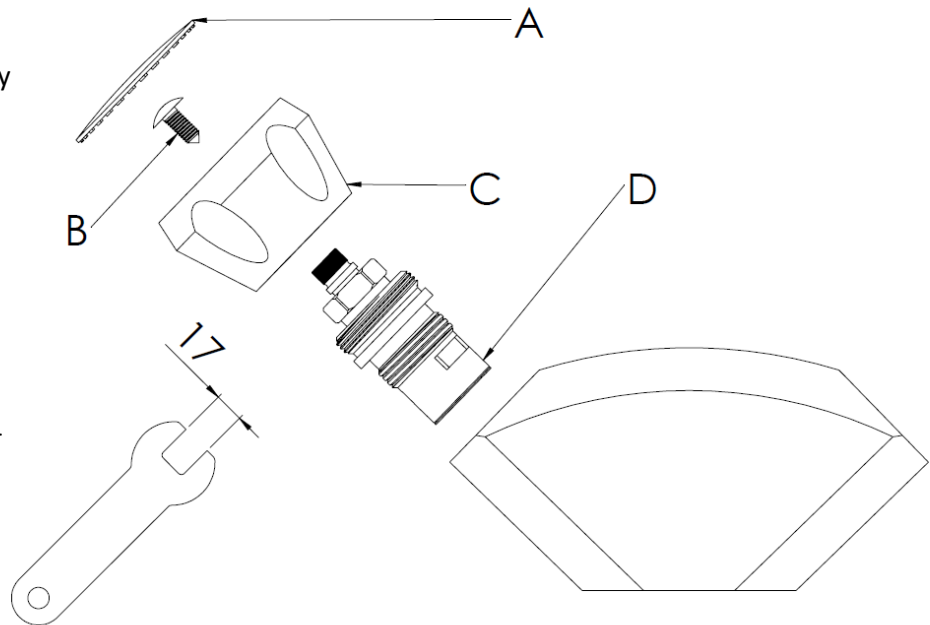

### ESSENTIAL TOOLS

17 mm ring spanner or suitable adjustable spanner, Posi head screw driver

### VALVE/CARTRIDGE CHANGE PROCEDURE

1. Turn off the water supply to the tap.
2. Using a flat head screw driver carefully remove the cover (A) from the handle assembly.
3. Next, using a posihead screwdriver, remove the screw (B).
4. Now, pull the handle (C) from the body of the tap.
5. Then, using a 17 mm or suitable adjustable spanner unscrew valve (D). Bear in mind that it might take some initial force to free the valve if it has been in place some time.
6. Select the correct valve. The valves are identifiable by the notches on the hexagon drive. If it has notches then it is the hot valve.
7. Screw the correct valve into the correct position and tighten firmly.
8. Check the spindle of each valve is in the closed position and then align the handle as close to vertical as you can manage. If the handle is not exactly vertical, slide off the handle and re-position it by rotating it one or two notches then refit the handle. Repeat this procedure until you are satisfied with the handle alignment.
9. Next, refit the handle and tighten it carefully to secure it in position. Do not over-tighten.
10. Turn the water supply back on and check for leaks.