
COMPATIBLE VALVE/CARTRIDGE CHANGE GUIDE

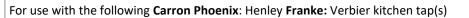

IMPORTANT! BEFORE YOU BEGIN

Replacing the valve/cartridge of the above taps is a straightforward procedure for any competent handyperson. However, should you have any doubts about your ability to tackle the task, we suggest you engage a suitably qualified professional.

You can also gain hints and tips about replacing a valve by watching our installation movies at TapSparesUK.com.

X ESSENTIAL TOOLS

14 mm ring spanner or suitable adjustable spanner, 2mm Allen key.

VALVE/CARTRIDGE CHANGE PROCEDURE

- 1. Turn off the water supply to the tap.
- 2. Using the 2 mm Allen key, remove the grub screw (B) from the handle assembly.
- 3. Next, pull the handle (A) from the body of the tap.
- 4. Remove plastic vernier insert (C). It will either remain at the end of the old valve, or stay inside the handle (new verniers are supplied with your new valves).
- 5. Unscrew the old valve (D) using a 14 mm or adjustable spanner. Bear in mind that it might take some initial force to free the valve if it has been in place some time.
- 6. Select the correct valve. The valves are identifiable by the notches on the hexagon drive. If it has notches then it is the hot valve.
- 7. Screw the correct valve into the correct position and tighten firmly.
- 8. Check the spindle of each valve is in the closed position, then slide the new vernier insert on the splined valve spindle. Align the handle as close to vertical as you can manage, but without clipping it on completely. If the handle is not vertical, remove it carefully while keeping the vernier in place. Slide off the vernier and rotate it 1 or 2 notches. Try the handle again. Repeat this operation until you are satisfied with the lever alignment, then push the handle assembly fully home to engage the clip.
- 9. Next, refit the handle and tighten it carefully to secure it in position. Do not over-tighten.
- 10. Turn the water supply back on and check for leaks.

Tap-

